



MP3 PLAYER

An accessory for Cybiko Xtreme computer

Model CY45P10



© 1999-2001 Cybiko, Inc.

CYBIKO XTREME MP3 PLAYER

The Cybiko MP3 Player is an accessory cartridge for your Cybiko Xtreme that allows you to listen to MP3 files with bit rate up to 320 Kbps. The MP3 files are stored on a special memory card (either Secure Digital™ or MultiMedia Card™) that plugs into the MP3 cartridge. You can download and upload MP3 files from your PC to the card and back via USB interface. Also, you can use this card as an additional disk for your Cybiko Xtreme – as you can record games and apps on it.

Cybiko Xtreme MP3 Player supports Secure Digital™ or MultiMedia Card™ cards in all capacities. You can use several cards to store different files. When you want to change, just plug a different card into the cartridge.

HOW TO INSERT/REMOVE A CARD

To insert a card into the cartridge, make sure the card is facing the right way, and then slide it into the slot on the cartridge. To remove a card, simply pull it out (but whilst data is being read from it!).



HOW TO INSERT/REMOVE MP3 CARTRIDGE

To insert a cartridge, remove the cover on the back of your Cybiko Xtreme to reveal a connection slot. Plug the MP3 cartridge into the slot. To remove a cartridge, push it out gently. It's important to keep the cover on when you don't have the MP3 player attached - as it protects the slot from dirt, water, and damage.



HOW TO RECORD FILES ON A CARD

You will need the EZ Loader program for this which you can get either from the installation CD or from www.cybiko.com.

1. Install EZ Loader.
2. Insert the card into the cartridge, insert the cartridge into your Cybiko Xtreme, and connect your Cybiko Xtreme to a USB port.

3. Format the card: Open File Manager. The card will be displayed as a Removable Disk. Press <Menu> or <Fn><Enter> on this item and select “Format...”
4. Install the MP3 Player application from the installation CD to your Cybiko Xtreme using EZ Loader (see EZ Loader Help for details.) This application gives you full control over the MP3 cartridge.

***Note:** We recommend that you install the MP3 Player application onto your Cybiko Xtreme disk. This will allow you to swap cards safely while this application is running.*

5. Record MP3 files (or Cybiko games and apps) on the card using EZLoader (see EZ Loader Help for details.)

HOW TO LISTEN TO MP3 FILES

1. Unplug the Cybiko computer from the USB port and run the MP3 application.
2. Press <Menu> or <Fn><Enter>. You will see the list of songs on the card.
3. Press <Enter> on a song to play it.

Use <Tab> to move to the toolbar in the bottom of the screen. Use <Left/Right arrows> to move between the buttons:



Equalizer



Play/Pause



Loop Mode



Stop



Random Mode



Next song from Playlist



Previous song from Playlist

See the full MP3 manual on www.cybiko.com for more features of the MP3 Player application.

HOW TO RECORD/ACCESS FILES STORED ON THE CARD

You can use your SD or MMC card as a removable disk for your Cybiko Xtreme. To record games and apps to the card, use EZ Loader. See EZ Loader help for details.

To access games/apps stored on the card, open Games or Apps folder on the Main Desktop. You will find shortcuts to each game and app stored on the card there.

To view and manage files on the card from your Cybiko Xtreme, use File Manager. The attached card is shown as Removable Disk – in addition to the regular Cybiko Xtreme Disk.

NOTE: IF YOUR CYBIKO XTREME IS FULLY CHARGED, IT IS CAPABLE OF PLAYING MP3 FILES FOR APPROXIMATELY 3.5-4 HOURS, DEPENDING ON THE LOUDNESS OF THE MP3 FILES AND THE QUALITY OF THE HEADPHONES.

PRECAUTIONS

- Never remove the card from your MP3 player cartridge when data on the card is being read or written.
- Never try to compress files on a card.
- Never force the cartridge into any other device or adapter other than a Cybiko computer.
- Avoid extreme heat, cold or humidity.
- Keep the cartridge away from direct sunlight, electrostatic sources and magnetic fields.
- This cartridge is not waterproof. Do not expose it to rain or moisture.
- Do not bend, drop, impact, or attempt to open the cartridge.

WARRANTY

Cybiko provides a limited 1-year guarantee to the original purchaser that this product manufactured by Cybiko shall be free from defect in workmanship. Cybiko's sole obligation in such event shall be Cybiko's option to either 1) repair, 2) replace, or 3) credit the value of the product (based on the lower of the actual purchase price or market value of the defective product return.)

Cybiko shall not be obligated to repair or replace defective products, in whole or in part, for causes external to the goods such as catastrophe, power failure, or improper use or handling. In no event shall Cybiko be liable to any person for any incidental or consequential damages of any kind or nature, which may be attributable to Cybiko products.

For questions please check our posted FAQ's at www.cybiko.com/uk/faq, or send an e-mail to support_uk@cybiko.com, or call 0870 905 0401. For further information, please refer to our web site, www.cybiko.com/uk.